



acerpure chef Series

Steam oven

User Manual

Model: KV544-50W

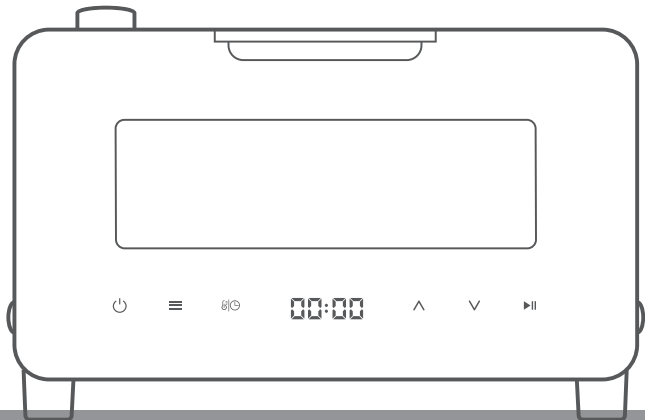 
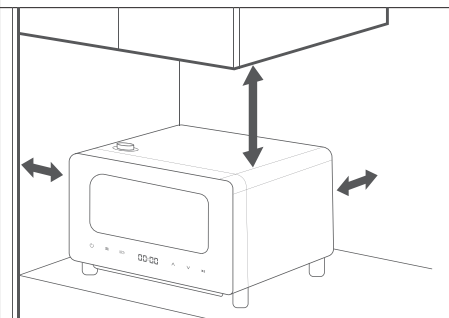 


Table of Contents


Safety Instructions	05
Product Configuration and Structure	08
Introduction to the Panel Screen	07
Disassembling and Maintenance	10
Introduction to Program Functions	12
Restricted Substance Content Labeling	13
Before Seeking After-sales Service	14
Product Specifications and Company Information	16

Safety Instructions


⊘ means it is “prohibited” ! means “caution” is required

⊘ Please do not use damaged power plugs. Otherwise, it may cause electric shocks or overheating and resulting in fire.	⊘ Please do not replace the power cable by yourself. Please make sure to contact customer service personnel to handle the replacement and maintenance of the power plug and power cable. Otherwise, it may cause scalding, injuries, electric shocks, fires or malfunctions.
! This electrical appliance is not intended for use by users (including children) with physiological, perceptual, mental ability, experience or knowledge deficiencies unless used safely under the supervision or guidance of the person responsible for their safety.	⊘ Do not connect external timers or remote operating systems. Connections with these products are not assumed.
! Children should be supervised to ensure they do not play with electrical appliances.	! Please make sure to clean and maintain the product after use. Dirt and carbonation of the bread crumb tray may cause fires. Please perform cleaning and maintenance correctly according to the manual.
⊘ Please do not use near flammable objects such as curtains. Otherwise, it may cause fires.	⊘ Please do not place the product on wooden materials such as wooden counters or wooden floors. It may cause wooden material to discolor.
⊘ Please do not place the product at locations with flammable materials such as: carpets, tatami, shaggy rugs and tablecloths, etc. Otherwise, it may cause fires.	⊘ Please do not block the ventilation holes (the sides, bottom, rear side and the bottom of the oven door), and please do not cover the body of the oven itself. Otherwise, it may cause scalding, fires or malfunctions.
⊘ Please do not place objects on top of the oven body. Please do not place objects in the gap below the body of the oven itself. Otherwise, it may cause fire or deformation.	⊘ Please do not place metal or foreign objects in the ventilation holes. Otherwise, it may cause electric shocks or malfunctions.
⊘ Please do not place the 5cc measuring cup or accessories on the top (outside the cup holder), sides, back, inside or spaces of the oven body. Otherwise, it may cause fires.	! Please place it in a stable place. Unstable placement may cause the oven door to open during operation. It may cause water to overflow and cause electric shocks. It may cause the oven body to topple over.
! As shown in the figure to the right, please leave some space around the oven body when placing. If the wall is made of plastic or other heat-intolerant materials, please leave more spaces when placing. Fire, malfunction, discoloration/deformation may be caused due to heat and vapor retention.	

 Safety Instructions




means it is
“prohibited”

 


means “caution”
is required

Please do not plug and unplug the power plug with wet hands. Otherwise, it may cause electric shocks.	Please do not use the power cable while there is a load on it. Otherwise, it may cause the power cable to overheat and result in fire. Therefore, please do not perform the following behaviors. Scratch/process/place it close to hot appliances/bend/tug/bundled use/step/twist/place under heavy objects.
Please do not perform disassembly, repairs and modification. Otherwise, it may cause fires or malfunctions. Please contact customer service personnel for repair matters.	Please do not clean the oven body with water, or immerse or splash water on the oven body. In addition, please do not use outdoors. Otherwise, it may cause electric shocks, fires or malfunctions.
Please do not use for purposes other than the cooking methods in the instruction manual. Otherwise, it may cause electric shocks or fires.	Please do not splash fluids on the wiring terminals such as the power plug. Otherwise, it may cause fires or malfunctions.
When there is still residual moisture in the boiler, please do not transport or tilt the oven body. Otherwise, it may cause water to overflow, burns or electric shocks. To confirm whether there is water, please wait for the oven body to cool off and then remove the boiler cover. When there is residual moisture, please wipe it dry with a dry cloth.	Using outlets that does not confirm with the rated specifications or using the outlet with other equipment simultaneously may cause overheating and result in fires.
Please insert the power plug all the way in properly. If the power plug was not inserted correctly, it may cause electric shocks or overheating and result in fires.	When unplugging the power cable, please unplug it by holding the power plug instead of the power cable. Otherwise, it may cause electric shocks or short circuit and resulting in fires.
Stop using immediately when there are abnormalities or malfunctions. Otherwise, it may cause injuries, electric shocks or fires. Please stop using and contact customer service personnel. Examples of abnormalities and malfunctions: • The power cable and power plug are abnormally hot. • The oven body has deformed and is abnormally hot. • The power cable was damaged and does not provide power when in contact. • The oven body appears to be warm or hot when not operating. • Water leakage from the oven body or boiler tray. • The glass of the heating tube or oven door has cracked. • The oven body fell or toppled over.	Please unplug the power plug from the outlet after cooking or when this product is not in use. Otherwise, it may cause electric shocks or fires
This product is not water-proof and should only be used at dry locations. Do not immerse the product in water or let rain fall on it, or use it outdoors or on wet surfaces to avoid product damage.	Do not connect external timers or operate it with independent remote control systems.

Safety Instructions

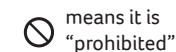

means it is
“prohibited”

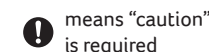


means “caution”
is required


Fill the water inlet and boiler tray only with tap water. If oil, seasoning, or food materials are added, it may cause electric shocks or fires.	Please do not pour more than a 5cc measuring cup of water into the water inlet. Please do not add water midway. Please do not fill water into places other than the water inlet. Please do not use containers other than the 5cc measuring cup included. Otherwise, it may cause water to overflow, burns, electric shocks and malfunctions.
If there is smoke or fire while cooking, do not splash water onto it; wait for the fire to extinguish naturally and then open the oven door. Otherwise, it may cause the glass to crack or continue to burn. Please press the power key to switch it off, and unplug the power cable.	Please keep the accessories such as the 5cc measuring cup out of children's reach. If infants or children accidentally swallowed the 5cc measuring cup, it may cause suffocation.
Please do not use parchment, baking paper or cake baking paper molds. Otherwise, it may cause fires.	Please control the thickness of the food materials under 5.5cm. Otherwise, it may cause fires. Please cut bread with thickness over 5.5cm , and do not place too many ingredients on thick slices of bread to avoid contact with the heating tubes above.
When cooking food materials that contain grease or can easily fall of the grill, such as butter, jam, cheese, meat, fish and fried food, etc., make sure to place them in heat-resistant containers or use aluminum foil. When food material or grease fall onto the heating tubes, it may cause fires. Please make sure to place them on heat-resistant containers, or use aluminum foils.	When cleaning, maintaining or moving the oven body, please unplug the power plug first and let it cool off sufficiently, then wipe the boiler tray with a dry cloth before proceeding. Otherwise, it may cause burns, injuries or electric shocks.
Please clean the inside of the oven regularly. If there are food scraps or grease remaining in the oven and food was cooked in this state, it may cause smoke, fire or uneven baking.	Please clean the power plug regularly. If dust accumulated on the power plug, it may cause fires. Please unplug the power plug from the outlet and wipe it dry with a dry cloth.
When cleaning and maintaining, make sure to unplug the power plug from the outlet and wait for the oven body to cool off sufficiently before proceeding. Otherwise, it may cause burns or electric shocks.	Please do not place the oven body on top of other equipment. Please do not place other equipment on top of the oven. Otherwise, it may cause failures or malfunctions.
Please do not splash water or apply great force on the oven door glass. Otherwise, it may cause the glass to crack and result in injuries.	Please do not let the water inlet cover get caught between the oven door and the oven body. Otherwise, it may cause fires or malfunctions.
Please do not place objects other than the grill, baking pan or boiler cover inside the oven body when not in use. Otherwise, it may cause malfunctions.	This product is for home use only. Please do not process, bend or tug the power cable and plug. If the power cable is damaged, it must be replaced by the manufacturer, its service department or personnel with related qualifications to avoid danger.

Product Configuration and Structure

 Product accessories

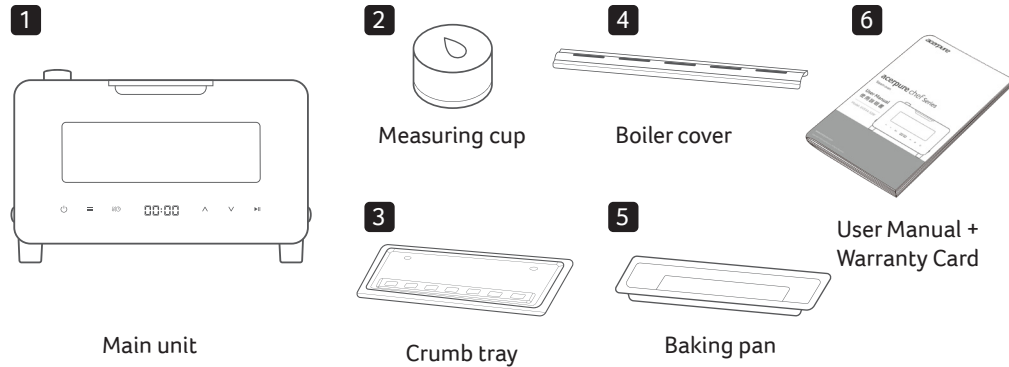

Product Structure

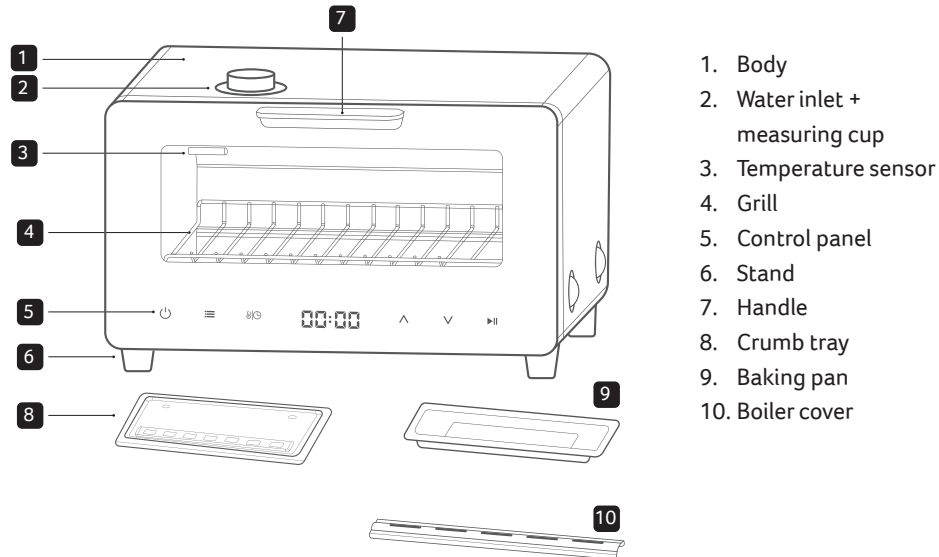 

Introduction to the Panel Screen



Power button

Long-press for one second to connect the power. During operation, single-press to cancel the task and return to selection status, and single-press the power button under selection status to power off.



Smart menu selection button

Press the button to quickly switch between the nine cooking modes.



Temperature/Time display switch button

Press this button to switch the display between time or temperature on the screen. The digital display window will cycle between temperature and time.



Adjust Up button

Increases the temperature, time and menu options.



Start/Pause button

After selecting the menu mode, press this button and the product will start operating. Press this button during the operation process and the product will stop operating temporarily, then press this button again and the product will resume operation.



 
Adjust Down button

Decreases the temperature, time and menu options.

Operating Instructions


- After inserting the power, the machine will “beep” and the power button will start flashing; this is standby status.
- Press the power button to activate the control panel. The icons that light up at this team mean they can be operated, and the icons that did not light up cannot be operated.
- Select the “Smart menu selection button” according to the food you want to make or the “Temperature/Time display switch button” to operate freely.
- Press the “Up button” and “Down button” to select the menu or temperature, and then press the “Temperature/Time display switch button”. When the time is displayed on the screen, the time can be set.
- Press the “Start/Pause button” to make the product work, and press this button while the product is operating to pause.
- Press the “Power button” while the product is operating to cancel all processes.
- After the task is complete, there will be three “beeps”, meaning that the task has ended.

Disassembling and Maintenance

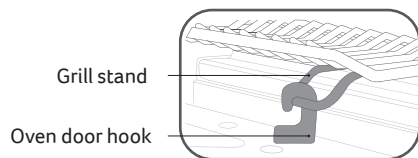

Pull the grill towards you while hooking the grill stand on the 2 oven door hooks inside the oven door.


 
※ Please make sure that the grill is hooked on the hanging axes of the grill and the oven door hooks properly.

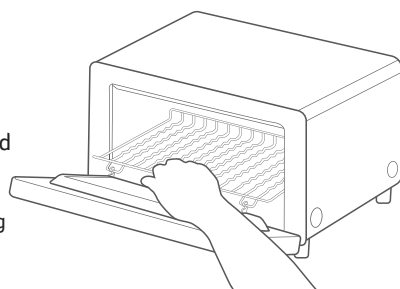

Confirm whether the bread crumb tray is installed properly

The bread crumb tray is installed at the location indicated in the figure.

  If the bread crumb tray has become deviated or fallen off, please insert it correctly in the direction shown in the figure.

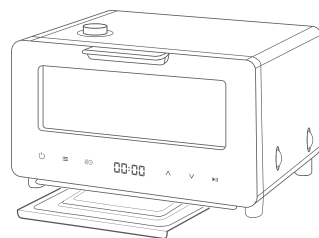
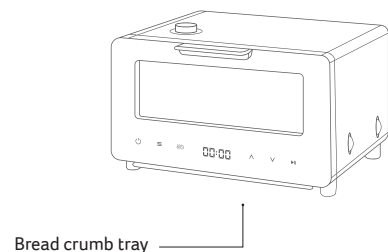


Set up the oven


As shown in the figure below, please leave some spaces around the oven body while setting up. (Set up standard)

Please note the following during set up.
Fire, malfunction, discoloration/deformation may be caused due to heat and vapor retention.

  - Please do not place the 5cc measuring cup or accessories on the top, sides, back, inside or spaces of the oven body.
- Please do not set up the oven body at locations that may be affected by heat sources.
- Please set up the oven body on a stable surface.
- As shown in the figure above, please leave some spaces around the oven body during set up. If the wall is made of plastic or other heat-intolerant materials, please leave more spaces when placing.
- Please do not place the oven body on top of other equipment such as microwave ovens.
Please do not place other equipment on top of the oven body.

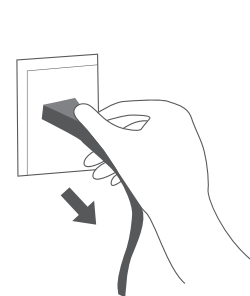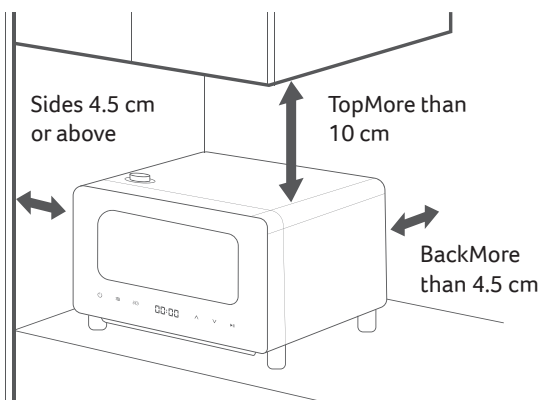


 Unplug from the outlet and wait for the machine body to cool off before cleaning.


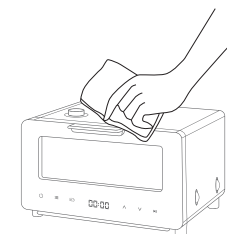


When cleaning the chamber, outer case, grill and other accessories, please use a soft towel or sponge soaked in neutral detergent. Please keep the surface clean and dry after cleaning.

 Do not clean with hard brushes or other hard objects to avoid scratching the oven body or baking pan.

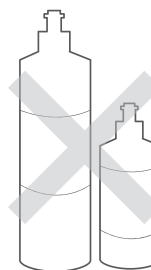

  Please keep the 5cc water cup properly after every use.

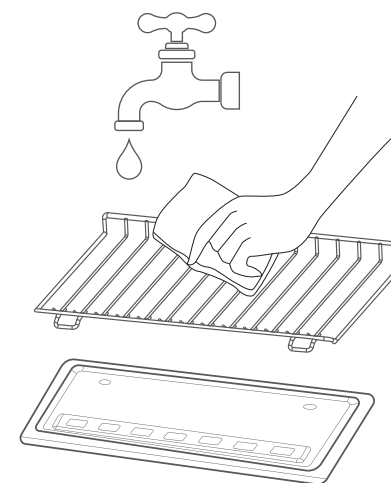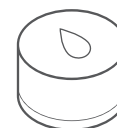

Wipe the shelves and debris tray with mild detergent and a soft cloth, then rinse with clean water and put them back into the machine after they are completely dry.

Introduction to Program Functions

Gear	Process Name		Preset Time (Minutes)	Steam Function	Process Description
1		Toast	3.5	V	Overall heating with fixed temperature, and final coloring with higher temperature to bake the surface until it is crisp and brown.
2		Cheese Toast	5	V	Overall heating with fixed temperature, and final coloring with higher temperature to bake the surface until it is crisp and brown.
3		French Toast	4	V	There are no grill marks, overall heating with fixed temperature.
4		Croissant	4	V	Overall heating with fixed temperature, and final coloring with higher temperature to bake the surface until it is crisp and brown.
5		Pizza	5	V	Overall heating with fixed temperature, and provides steam to keep the food materials moist.
6		Chicken Wings	15	X	There are no grill marks, overall heating with fixed temperature.
7		Cookies	15	X	There are no grill marks, overall heating with fixed temperature.
8		Gratin	7	X	There are no grill marks, overall heating with fixed temperature.
9		Extreme Flame Coloring	3	X	Only heats with the heating tubes to color the surface of the food materials with higher temperature, and bake the surface until it is crispy and brown.

* The times can be freely adjusted for the processes; if it is frozen food, it is recommended to add an additional 1~2 minutes.

Restricted Substance Content Labeling

Equipment Name: Steam Oven			Model (type): KV544-50W			
Unit	Restricted substances and their Chemical Symbols					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Metal casing	-	○	○	○	○	○
Chamber	-	○	○	○	○	○
Door components	-	○	○	○	○	○
Grill/baking pan	○	○	○	○	○	○
Circuit controller	-	○	○	○	○	○
Heating tube	○	○	○	○	○	○
Other components	-	○	○	○	○	○
Plastic Components	-	○	○	○	○	○

1. "Exceeds 0.1 wt %" and "exceeds 0.01 wt %" means that the percentage of restricted substances exceeds the reference value.
2. "○" means that the percentage of the restricted substance does not exceed the reference value.
3. "-" means that the restricted substance is an excluded item.

Before Seeking After-sales Service

If you discovered that the product malfunctioned, please check the following items before contacting customer service.

Please contact customer service if the abnormal problems still could not be solved with the methods above.

Problem	Possible cause	Solution
Smoke or odor appeared		Smoke or odor will appear during first use, however, this condition will gradually alleviate with continued use.
If a “click” sound is heard while cooking, it is because the heating tube turns on and off while cooking.	It is not a malfunction. The heater turns on and off to adjust the temperature.	Please continue using.
Smoke comes out of the oven door while cooking.	The steam generated by the boiler component or the moisture contained in bread may become steam and comes out of the oven door.	Since the temperature of steam is high, please beware and do not let your hands or face get close to the steam.
The time displayed on the timer knob is different from the actual cooking time.	The oven will control the temperature according to the environment (room temperature and humidity, etc.) around the oven or the temperature inside the oven. The time may be different, but it is not abnormal.	Please continue using.
There are sizzling sounds when water is added.	When the boiler tray is already in heated status (such as continuous baking, etc.), the tray will emit an evaporating sound when water is added; this will not affect the completion of baking.	Place move the product to a flat floor or table top.
A “pounding!” sound comes out of the oven while cooking.	It is not a malfunction. This sound is caused by the expanding of metal due to heat energy.	Please continue using.
Oven door cannot be closed.	Is the baking pan, boiler cover and bread crumb tray installed properly?	
	Is the water inlet cover or object stuck between the oven and the oven door?	Please remove the stuck objects.
There is water leaking from the bottom of the oven or the bread crumb tray.	Is the oven tilted?	Please place it in a stable place.
	Was too much water added?	Please make sure the chamber has cooled off and then drain the excess water.
	Was water added for modes that do not require steam?	Please operate according to the instructions

Problem	Possible cause	Solution
Unable to bake slightly brown colors.	Was an incorrect mode selected? Was the timer stopped while cooking?	Under toast mode and cheese toast mode, the slight brown color baking is performed at the final stage of the timer. If operation was interrupted during the process, the slight brown color may not be obtained.
	Based on the voltage status of the outlet, the ambient temperature/ surrounding and the condition of the toast, the slight brown coloring status may vary.	1.Coloring can be enhanced with process nine mode. 2.Please adjust the time the next time you cook to bake the slight brown color you prefer.
	Did the position of the food material deviate from the heating tube?	Please place the food materials at the center of the oven.
	Is the inside of the oven dirty?	Is the inside of the oven dirty? When the inside of the oven is dirty, it would be difficult to obtain slight brown colors. Please clean and maintain the product regularly.
Does not generate steam.	Did the inside of the oven heat up?	When this oven is used continuously, because the inside of the oven is in a high-temperature state, condensation may not occur, and steam could not be seen. However, this is not abnormal.
	Is there water in the boiler tray?	Please make sure the chamber has cooled off, and then check the boiler tray.
	Was it used under a mode that do not require steam?	Steam will not be generated under these modes.
There is moisture remaining in the boiler tray.	Was more than 5cc of water added? Was the operation time shorter?	If more than 5cc of water is added, the water may not boil completely, which causes residue.
	Was it used under a mode that do not require steam?	The boiler tray will not operate under these modes, therefore moisture will remain even if water is added.
The heating tube is dirty.		Please do not wipe the heating tube. Due to the features of the material, it may be difficult to remote the dirt attached on the heating tube completely. However, it will become less noticeable with continued use.



Product specifications

Product specifications	
Product name	Steam Oven
Product model	KV544-50W
Rated voltage	110V/60Hz (Taiwan specifications only) 220V-240V~50/60Hz
Rated power	1300W
Net weight	5.2Kg
Product dimensions	344 x 210 x 318mm
Country of origin	China



Company information



www.acerpure.com

NOTE

acerpure